

Body type: Station wagon Type: GL3W Model year: 2021



Fuse box

disabling

voltage

system

Version Date.

1/2021

high

Version No.

01

High voltage

disconnect

Ultra

high


Page

1/4

voltage

capacitor,



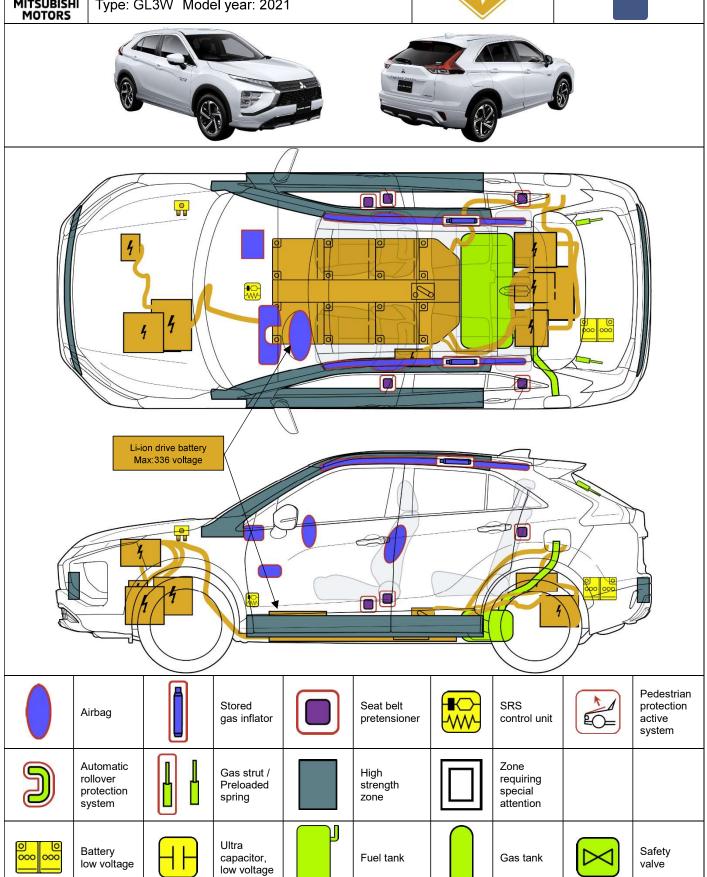

High

voltage

battery

pack

High

voltage

power

cable /

component

ID No.

GLW-ENRS-EN01



Body type: Station wagon Type: GL3W Model year: 2021





1. Identification / recognition


Features on vehicle exterior






2. Immobilisation / stabilization / lifting

How to determine if vehicle is ON / OFF

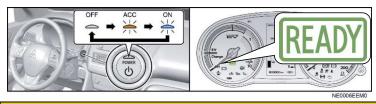

Support positions for Jack and Lift

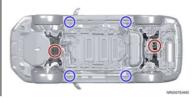

- O: Support position for Garage Jack
- O: Support position for Jack or Axle stands or Lift


3. Disable direct hazards / safety regulations


1. How to disconnect the 12V auxiliary battery negative terminal

Wait 1 minutes after turning off the POWER SWITCH.





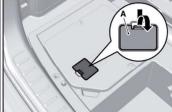


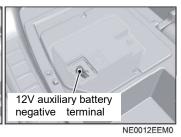



2. How to disconnect the "Power unit control" fuse

If you cannot locate this fuse, remove all fuses and relays in the fuse box.

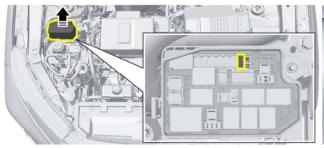







NR0013EAM0

3. Use insulating Personal Protective Equipment (PPE) (Rubber insulating gloves, Rubber soled insulating)









How to shut down High voltage (pull out the service plug)

Next page

Wait 5 minutes after disconnecting the 12V auxiliary battery negative terminal



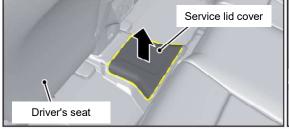

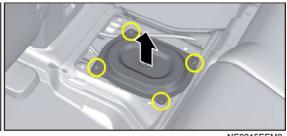

NE0015EEM0


ID No.	Version No.	Version Date.	Page
GLW-ENRS-EN01	01	1/2021	2/4





Body type: Station wagon Type: GL3W Model year: 2021





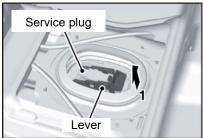

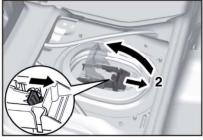

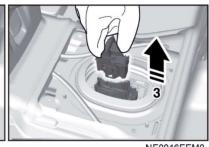




NE0016EEM0

4. Access to the occupants


Windows

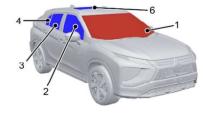



1: Laminated glass 2 - 6: Tempered glass

Steering adjustment

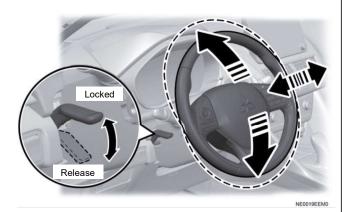

Seat adjustment





Manual Seat

- 1 : Forward or backward
- 2 : Recline the seatback
- 3 : Seat height (driver's side only)

Power Seat


- 1 : Forward or backward
- 2 : Recline the seatback
- 3 : Seat cushion angle
- 4 : Seat height

Vehicle CUT Zones




CUT ZONE

Risk of high voltage shock and airbag deployment

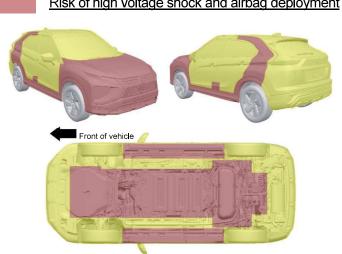

High-tensile and Ultra-high-tensile steel panels location

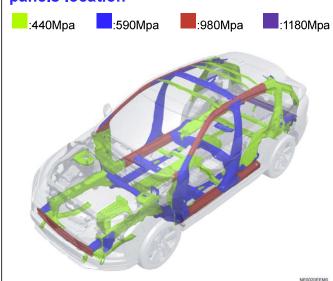

ID No.	Version No.	Version Date.	Page
GLW-ENRS-EN01	01	1/2021	3/4



Body type: Station wagon Type: GL3W Model year: 2021





5. Stored energy / liquids / gases / solids

Fluids / gases used in this vehicle

Fuel tank	45 liters	000 000	12V auxiliary battery	LN2 (59Ah)
Li-ion drive battery	13.8 kWh	業	Refrigerant (air conditioner)	HFO-1234yf: 495 – 535 g















6. In case of fire

1. Vehicle fire

In case of vehicle fire, alert fire department immediately and start extinguishing the fire.

2. Fire-extinguishing





Use ABC powder or large quantity water to extinguish the fire



WARNING;

Never use seawater or any water containing salt.









7. In case of submersion

Submerged Vehicle

- · If the vehicle is submerged or partially submerged, first pull the occupants out of the vehicle and water.
- Then shut down the high voltage system. (Refer to 3.-2. How to disconnect the "Power unit control" fuse and 3.-4. How to shut down High voltage (pull out the service plug))
- If the vehicle is submerged, the drive battery may generate flammable hydrogen gas.
- · If the vehicle is submerged, water may enter the drive battery.

8. Towing / transportation / storage

How to Transport



9. Important additional information

For the detail, please refer to Emergency Response Guide.

10. Explanation of pictograms used Keyless operation key distance Risk of damaging human health Warning, Electricity Risk of flammability Caution Warning, low temperature Open Hood Risk of an explosion Service plug Risk of corrosive material / 0 Open Tailgate Fuse box disabling high voltage Use ABC powder to extinguish Use water to extinguish the fire Air-conditioning component the fire Version No. ID No. Version Date. Page 1/2021 **GLW-ENRS-EN01** 01 4/4